


## LED Dimmer Installation Guide

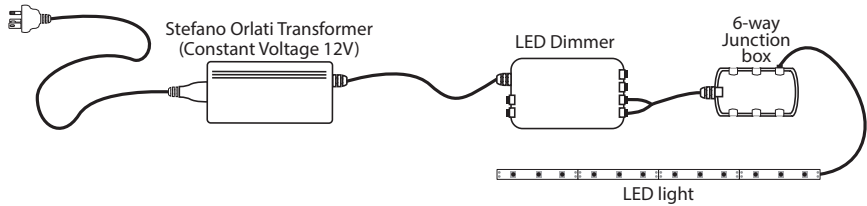


### DIMMER BOX CONTENTS\*

- Dimmer Control Unit connected to 6-Way Junction Box
- Dimmer Remote (includes AAA Batteries)
- Mounting Bracket for Remote control
- \* LED Dimmer Unit & Remote are supplied Pre-Paired

Capacity Guide	
Working Voltage	DC 12V/24V
Receiving Range	20 meters
RF Touch Remote	2.4GHz

### DIMMER REMOTE – USE/FUNCTION OF KEYS

- KEY 1. On
- KEY 2. Off
- KEY 3. Highest Brightness
- KEY 4. Medium Brightness
- KEY 5. Lowest Brightness
- COLOUR RING. Used to change the brightness from highest to lowest

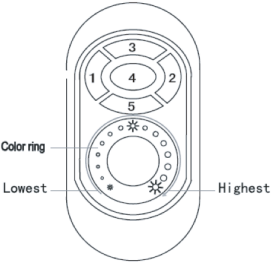

### PAIRING METHOD FOR ADDITIONAL REMOTES

- STEP 1. Ensure Transformer is plugged in & Power is ON
- STEP 2. Connect the DC power cord to the Dimmer Control Box then, press Key 3 once within 3 seconds
  - The light will blink 3 times if matching is successful
  - Repeat above steps for more than one remote pairing

### CLEARING METHOD

- STEP 1. Ensure Transformer is plugged in & Power is ON
- STEP 2. Connect the DC power cord to the Dimmer Control Box then, press Key 3 five times within 3 seconds
  - The light will blink 6 times if clearing is successful

### NOTE:

**Replacing Remote Batteries**  
 Please ensure the colour ring is not being touched when loading batteries. It is recommended to use the remote controller within 3 seconds after batteries have been loaded