


Colour Temperature CCU Install Guide

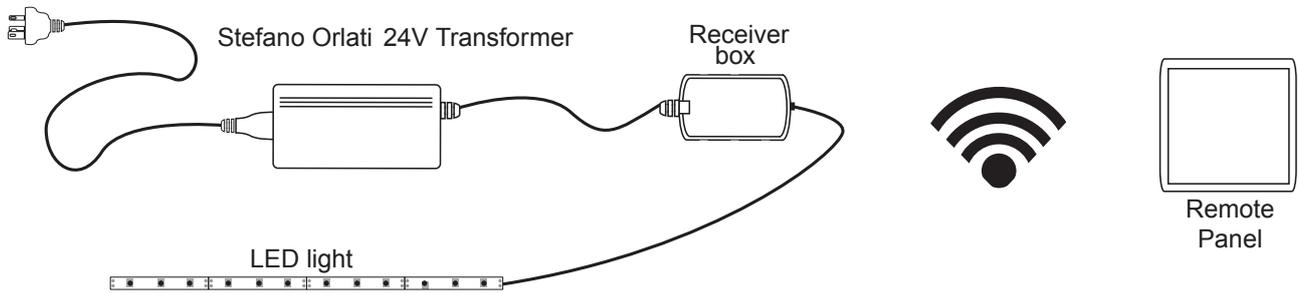

WHAT YOU'LL NEED

- Receiver box
- Remote panel
- 3527 CW/WW LED strip
- 24V transformer
- 2x AAA Batteries

INSTRUCTIONS

Step 1:

- Install 2x AAA batteries into the controller panel

Step 2:

- The non-power end of the receiver box is the side without the transformer power-in outlet
- Loosen the flat head screws on the underside of the non-power end of the receiver box

Step 3:

- The receiver box has designated outlets for each wire of the Colour Temperature strip. WW = yellow wire, CW = white wire and V+ = black wire.
- Line the tail end of the 3527 CW/WW strip up with the receiver box and insert wires accordingly. Tighten screws and check for any loose connections.

Step 4:

- Plug the transformer directly into the receiver box and connect to 240V wall power

Step 5:

- Within 10 seconds of supplying power, select the desired pairing zone by pressing the 'I' on any but the 'ALL' zone 3 times to pair that zone. LEDs will flash when successful

Step 6:

- Turn off and back on, then cycle through the colour wheel to test.
- To turn the sound on and off, hold down the respective button for five seconds.

