


## RGBW CCU Install Guide

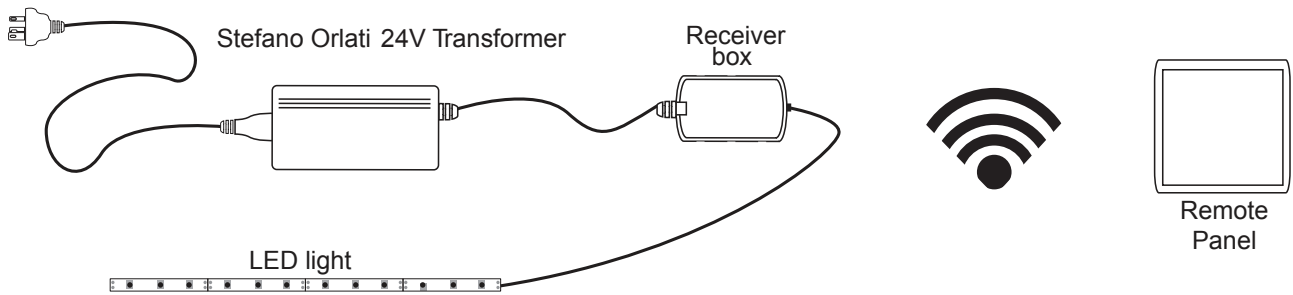

### WHAT YOU'LL NEED

- Receiver box
- Remote panel
- 5050 RGBW LED strip
- 24V transformer
- 2x AAA Batteries

### INSTRUCTIONS

#### Step 1:

- Install 2x AAA batteries into the controller panel

#### Step 2:

- The non-power end of the receiver box is the side without the transformer power-in outlet
- Loosen the flat head screws on the underside of the non-power end of the receiver box

#### Step 3:

- The receiver box has designated outlets for each wire of the RGBW strip. R = red wire, G = green wire, B = blue wire, W = white wire and V+ = black/brown wire
- Line the tail end of the 5050 RGBW strip up with the receiver box and insert wires accordingly. Tighten screws and check for any loose connections.

#### Step 4:

- Plug the transformer directly into the receiver box and connect to 240V wall power

#### Step 5:

- Within 10 seconds of supplying power, select the desired pairing zone by pressing the 'I' on any but the 'ALL' zone 3 times to pair that zone. LEDs will flash when successful

#### Step 6:

- Turn off and back on, then cycle through the colour wheel to test.
- To turn sound off and on hold down action respective button for five seconds.

